

Fitment Guide (Threshing Elements)

Threshing Element	Part Number	Optional Number	Comments
Gorden Rotor Bars	CMRB049		Install to increase threshing, reduce rotor loss and increase material handling capacity.
Non-Hooked Rasp bar	CM278821A2		Install for gentle threshing and steady material movement. Known as a standard threshing element
Hooked Rasp Bar	CM278820A2	CM278820A2PS	Install for more aggressive threshing and disturbance to the material mat. Used to fluff and agitate the mat and used in the separation area.
Gorden Separator Bar	CMRB051		Install to increase separating capacity and reduce rotor loss.
Kicker Bar			Install to forcefully discharge the straw mat from the rear of the rotor cage

* Rotor threshing configuration is crop specific. The image used in this document is for illustrative purposes only. It is suggested that you consult with experienced machine operators and CASE-IH® dealers to find out the best configuration for your cropping conditions.

COLLIER & MILLER

CASE-IH® AFX™ ROTOR THRESHING ELEMENT OPTIONS

