


KINCROME



PROFESSIONAL QUALITY TOOLS

Quick Start Guide



How to measure tyre pressure

- Ensure the vehicle is stationary prior to measuring tyre pressure
- Press  button to turn the *Smart Tyre Gauge* ON
- Remove the Dust Cap off the tyre valve, and push the Tyre Pressure Gauge onto the tyre valve
- The *Smart Tyre Gauge* will automatically display the current tyre pressure
- The *Smart Tyre Gauge* will turn OFF



How to save tyre pressure readings

- The *Smart Tyre Gauge* can save up to 4 tyre pressure readings
- Simply press  to record the tyre pressure reading
- Press  to select another position to record your reading

How to turn ON/OFF the LED light

- Turn the unit ON via the  button
- Once  the unit is on, simply press the to turn ON/OFF the light

Deflating tyres

- Turn the unit ON via the  button
- Remove the dust cap from the tyre valve, and push the *Smart Tyre Gauge* onto the tyre valve
- Press and hold the  button located on the rear of the unit, until your desired tyre pressure is reached.

Specifications:

- 3 Measurement modes (psi, bar, kg-cm²)
- Measurement range: 5 to 100 PSI
- Operating temperatures: -20°C to 50°C
- Powered by 2 X CR2032 button batteries included
- Auto turn OFF feature: Yes (30 Seconds)
- Product dimensions: 153 x 35 x 35mm
- Weight: 80g

Office Contact Details



Phone: 1300 657 528



Fax: 1300 556 005



Email: enquiries@kincrome.com.au



Website: www.kincrome.com.au

Caring For The Environment



When a tool is no longer usable it should not be disposed of with household waste, but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.



Kincrome UK Ltd PO Box 646 EASTLEIGH S050 0NA

Australia & Global	UK & EU
www.kincrome.com.au	www.kincromeco.uk
enquiries@kincrome.com.au	enquiries@kincrome.co.uk



Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in China
Warranty given by Kincrome Tools & Equipment Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria, Australia (Tel +61 3 97307100) If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian, United Kingdom & Ireland Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian, United Kingdom & Ireland Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit www.kincrome.com.au or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.