

KINCROME

Wireless Charging Penlight Torch



K10317

ED1 (November 24)

Table of Contents

Know Your Product	2
Safety Instructions.....	3
Operation	4
Warranty	5

Know Your Product

1. 250 lumen SMD LED
2. Charging indicator
3. USB & wireless charging technology*
4. Pocket clip
5. Magnetic base



*Suitable for use with KinCrome Wireless Charging Pads K10314 & K10315. Sold Separately.

Specifications

LED type	5W SMD LED, 6000K
Light output	Low - 80lm, High - 250lm
Runtime	Low - 8hrs, High - 2hrs
Battery	Rechargeable 3.7Vdc 700mAh Li-Po
Charge time	2.5 Hours (Cable), 2.5 Hours (Wireless Charger)
Weight	62 grams
Measurements	L25 x W20.7 x H145mm

General Safety Warnings

This operating manual contains important safety information, read carefully & understand all information before operating the Torch. **Save this manual for future use.**

Advice & Important Information!

- Ensure the Penlight Torch is fully charged before initial use.
- DO NOT turn the Penlight Torch on when its being charged.
- DO NOT leave battery in a discharged state, recharge battery immediately. Before storage, fully recharge the battery, subsequently recharge the battery at least once every six months of non-use.
- DO NOT dispose of this Penlight Torch in normal household waste, the battery must be recycled or disposed of properly in accordance to local laws and regulations.
- DO NOT open, crush, heat above 60°C (140°F) (for Li-Ion) or incinerate.
- Battery life is affected by different lighting modes.
- DO NOT look directly at the LED. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT operate in direct sunlight or extreme temperature conditions (below -10°C or above 40°C).
- The LED will become hot when switched on; DO NOT touch and DO NOT place face down on any surface – risk of fire!
- DO NOT use the device if there is any visible damage to the housing, switch or lens.
- Keep away from children! Children should be supervised in order to ensure that they DO NOT play with the device!
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Store idle light out of reach of children. Warm lights can become hazardous in the hands of children.
- DO NOT open, disassemble or attempt to modify the product; this will void the warranty and can be dangerous. Improper use or modification is not covered under the warranty.
- Take care not to let the lenses come into contact with hard/sharp objects, damage/scratches to the lenses will affect light output.
- Protect batteries from heat, intense sunlight, fire, water and moisture – danger of explosion!
- If batteries are damaged, fluids can leak out. AVOID contact as this can lead to skin irritation and/or burns. If skin contact happens, rinse thoroughly with water. If irritation persists, seek medical advice.
- Seek immediate medical assistance if battery acid comes into contact with the eyes.

Charging the Battery

The battery fitted to this cordless tool is considered to be a consumable item and its ability to accept charge will reduce over time. We will warranty it against mechanical and electrical defect for a period of three years - this does not cover fair wear and tear.

If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish.

Under these circumstances we will not replace the battery even if it is less than three years old.

Note: Fully charge the Penlight Torch before first use.

Note: The Lithium battery does not suffer from memory effect and once fully charged may be stored for up to six months without another charge.

Charging Via The USB-C Port

- While holding the Penlight Torch, peel open the USB charging port cover to expose the USB-C charging port.
- Plug the supplied USB-C cable into the USB Charging port and the USB connector into the appropriate charging source (not supplied).
Note: The USB Charging indicator will flash green and as the level of charge increases the light will become solid.
- When the product is charging and the battery light has become solid, the product is fully charged.

Charging Via The Wireless Technology (Wireless Charging Pad not supplied)

An optional wireless charger can be purchased for this Penlight Torch. There are two options currently available. The Kincrome K10314 Single Charging Pad and the K10315 Dual Charging Pad (more information can be found at www.kincrome.com.au). It is recommended you refer to the Charging Pad instruction manual for additional safety instructions and additional instructions.

- Plug the one end of the USB-C cable into the charge port on the bottom of the Charging Pad.
- Plug the other end of the USB-C cable into a USB-C power supply.
WARNING: ensure the power supply being used does not exceed the max rating on the back of the pad.
- Ensure that the wireless symbol and the wireless charging magnet of the Penlight Torch are aligned with the wireless symbol and the wireless charging magnet of the Charging Pad, place the Penlight Torch onto the wireless Charging Pad.
Caution: If the Wireless charging magnet and wireless charger are not correctly aligned, the product will NOT charge.
- The green LED on the front of the light will flash to indicate charging.
Note: The USB Charging indicator will flash green and as the level of charge increases the light will become solid.
- When the product is charging and the battery lights has become solid, the product is fully charged.

Operation







Turning ON/OFF the Penlight Torch

The Penlight Torch has 2 different light settings Low mode and High mode.

The On/Off button requires to be pressed in the following sequence to activate each mode.

- 1st press: Low
- 2nd press: High
- 3rd press: Off

Description of Symbols

	Wireless Charging Sensor		Magnet
lm	Lumens	V	Volts
IP	Ingress protection from water, dust and debris	mAh	Milli-Amp Hours
A	Amps (current)		Regulatory Compliance Mark
	Conformity with European health, safety & environmental protection standard		Class III protection
	Do not look directly at light source		



Warranty

Our goods and services come with guarantees that cannot be excluded under the Australian Consumer Law. For major failures with the service, you are entitled: -to cancel your service contract with us; and -to a refund for the unused portion, or to compensation for its reduced value. You are also entitled to choose a refund or replacement for major failures with goods. If a failure with the goods or a service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done you are entitled to a refund for the goods and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service. Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528) also provides the Kincrome Lifetime Guarantee and 12-Month Warranty (Kincrome Express Warranties) in respect of some of its products. If a product is covered by a Kincrome Express Warranty and it has materials or workmanship defects (other than defects caused by abnormal or non warranted use) which are covered under the terms of the relevant Kincrome Express Warranty, you can, at your cost, send the product to the above address for repair or replacement. Your rights under a Kincrome Express Warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. For further details and terms please check our product guide, visit www.kincrome.com.au or call us. Every effort is made to ensure advertised stock is available, but due to factors beyond the control of Kincrome Australia Pty. Ltd, not all products advertised in this catalogue may be available at all stores. Kincrome Australia Pty. Ltd. reserves the right to correct printing errors. All sizes shown are approximate only. Accessories shown do not come with the product unless otherwise specified. Due to printing process, colours in this catalogue may vary slightly to actual item. E. & O. E.© Copyright 2022. Reproduction in whole or in part is prohibited without written approval.



KINCROME

www.kincrome.com.au