

MAXWATT®


POWER WHEN YOU NEED IT

SPARE PARTS CATALOGUE




MX3500ISR

CRANKCASE

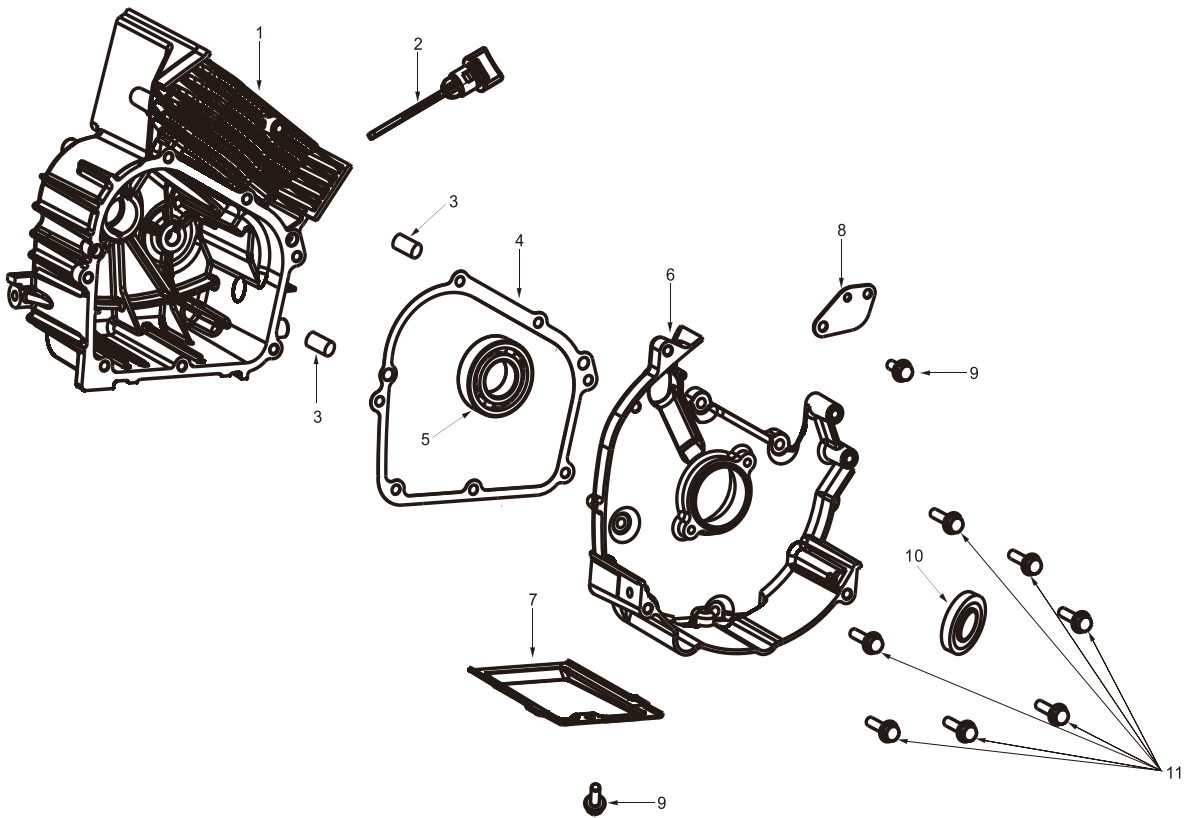


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Crank case	
2	Dipstick assembly	
3	Locating pin	
4	Crankcase gasket	SP3500ISR-001
5	Bearing	
6	Crankcase cover	
7	Lower wind deflector	
8	Crimping board	
9	Bolt	
10	Oil seal	SP3500ISR-002
11	Bolt	

CRANKSHAFT

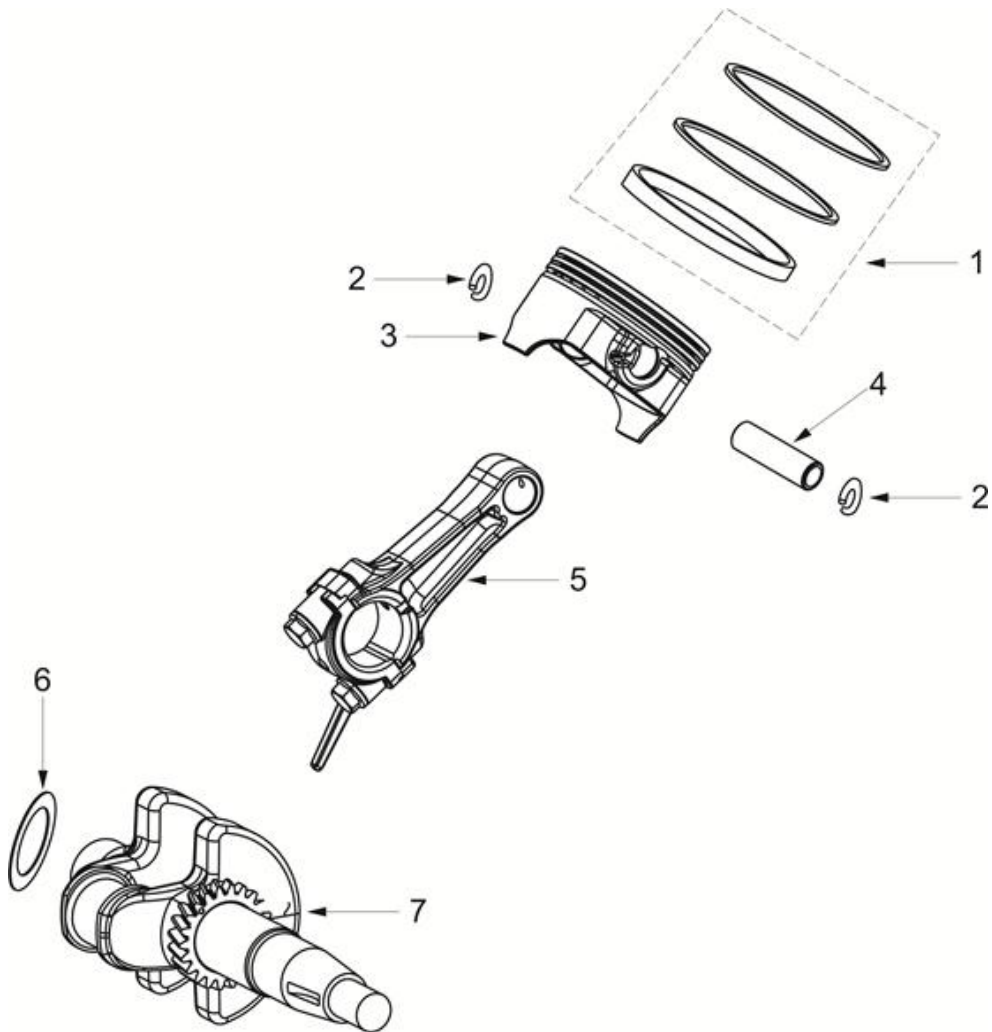


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Ring as-piston	SP3500ISR-003
2	Piston pin circlip	
3	Piston	
4	piston pin	
5	Connecting rod assembly	
6	Wear resistant gasket	
7	Crankshaft assembly	

CYLINDER HEAD

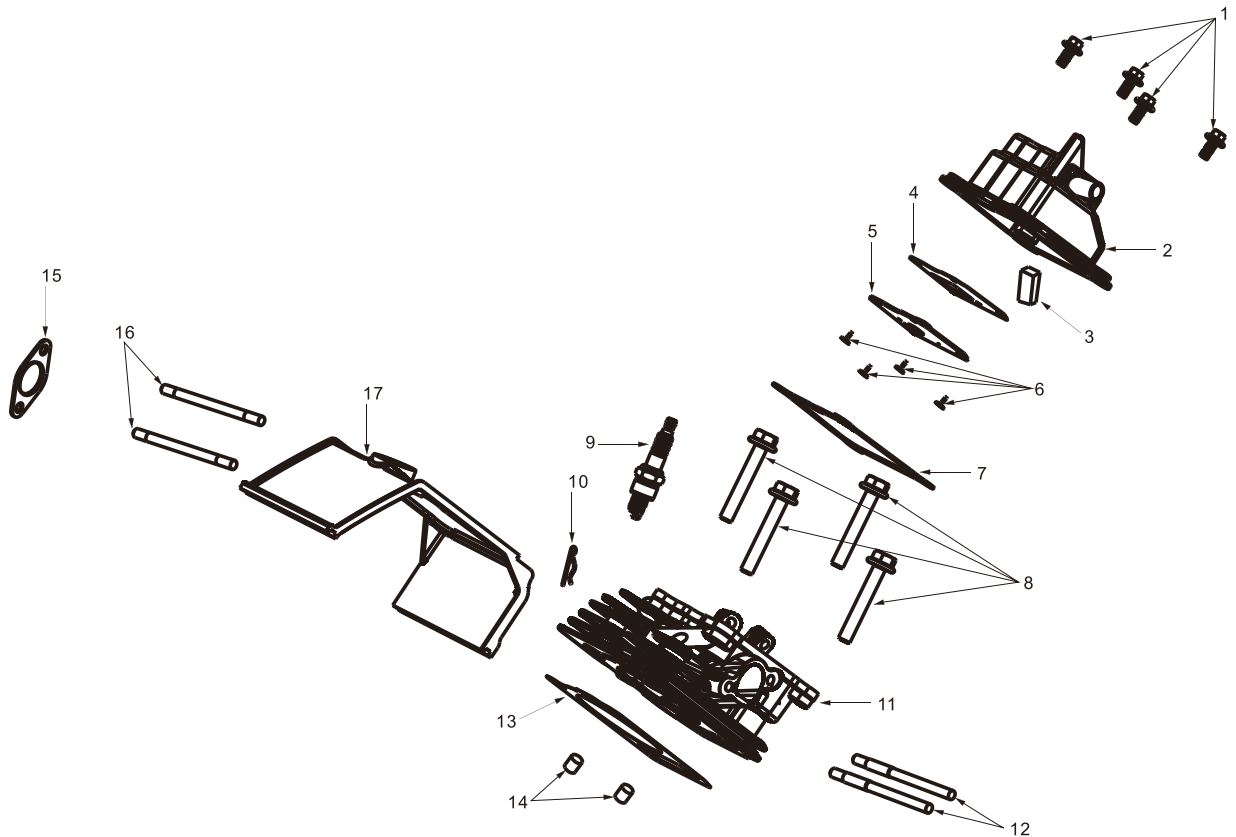


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt	SP3500ISR-021
2	Cover subassembly,Cylinder head	
3	Oil screen	
4	Sealing gasket of breathing tank	
5	Breathing valve cover plate	
6	Cross head screw	
7	Cylinder head cover pad	
8	Bolt	
9	Spark plug	
10	Locking clamp of speed regulating swing rod	
11	Cylinder head	
12	Stud bolt	
13	Gasket,Cylinder head	
14	Pin	
15	Exhaust port gasket	
16	Limit plate gasket	
17	Wind deflector	

STARTER

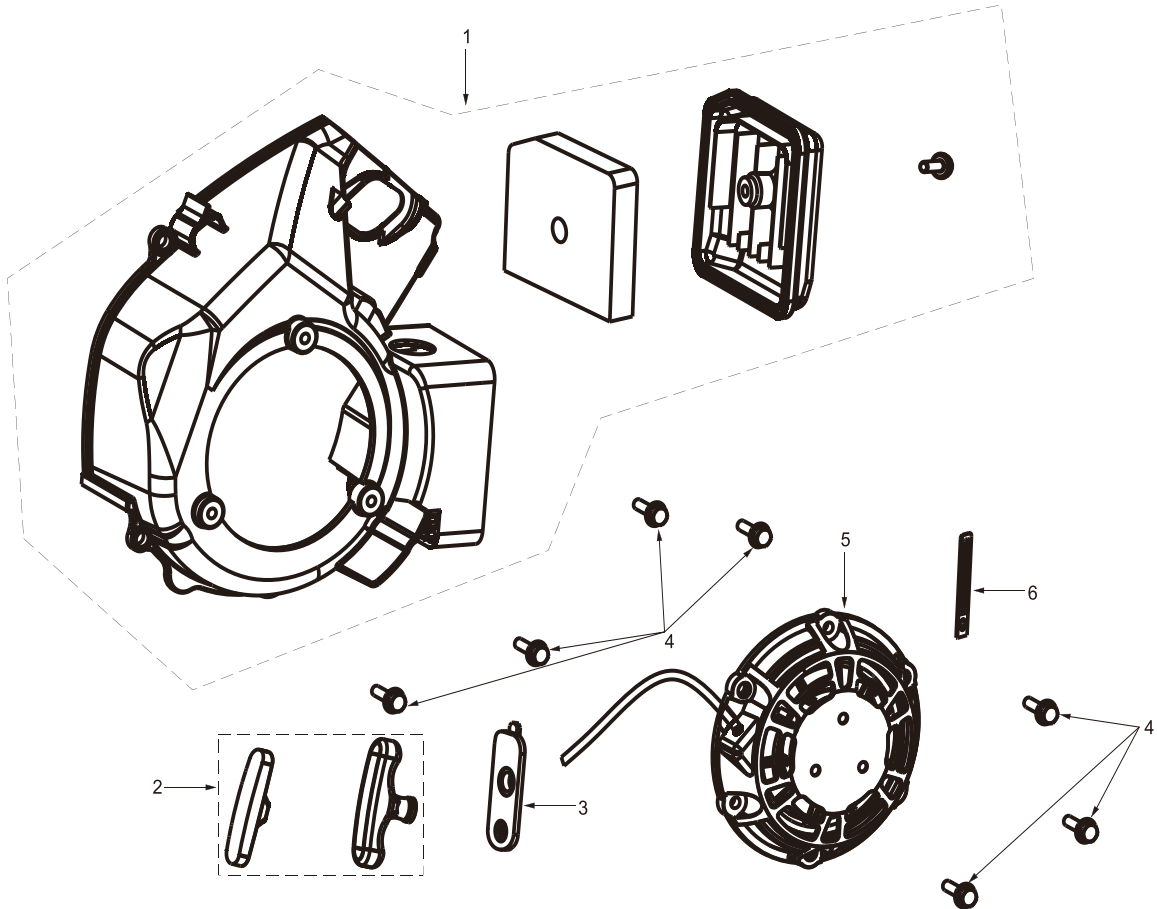


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Shroud as-air	SP3500ISR-004
2	Starting handle	
3	Handle cover plate	
4	Bolt	
5	Pulling plate	
6	Crimping board	

MOTOR

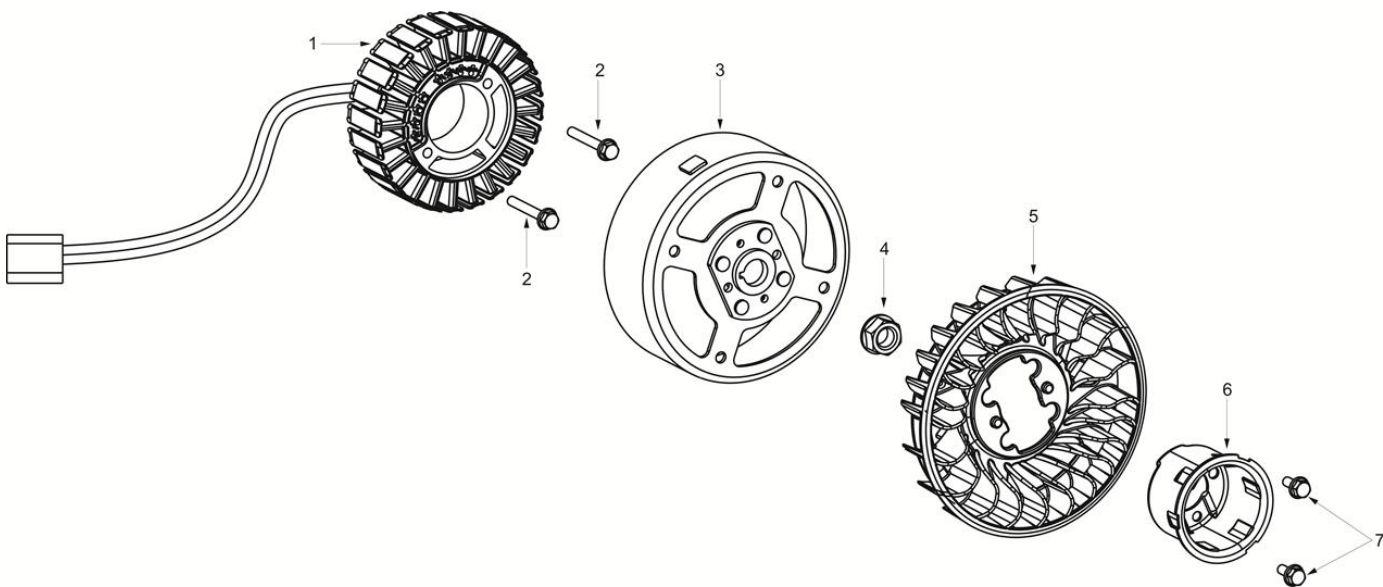


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Motor stator	
2	Bolt	
3	Motor rotor	
4	Nut with disc	
5	Impeller	
6	Starting sleeve	
7	Bolt	

CAMSHAFT

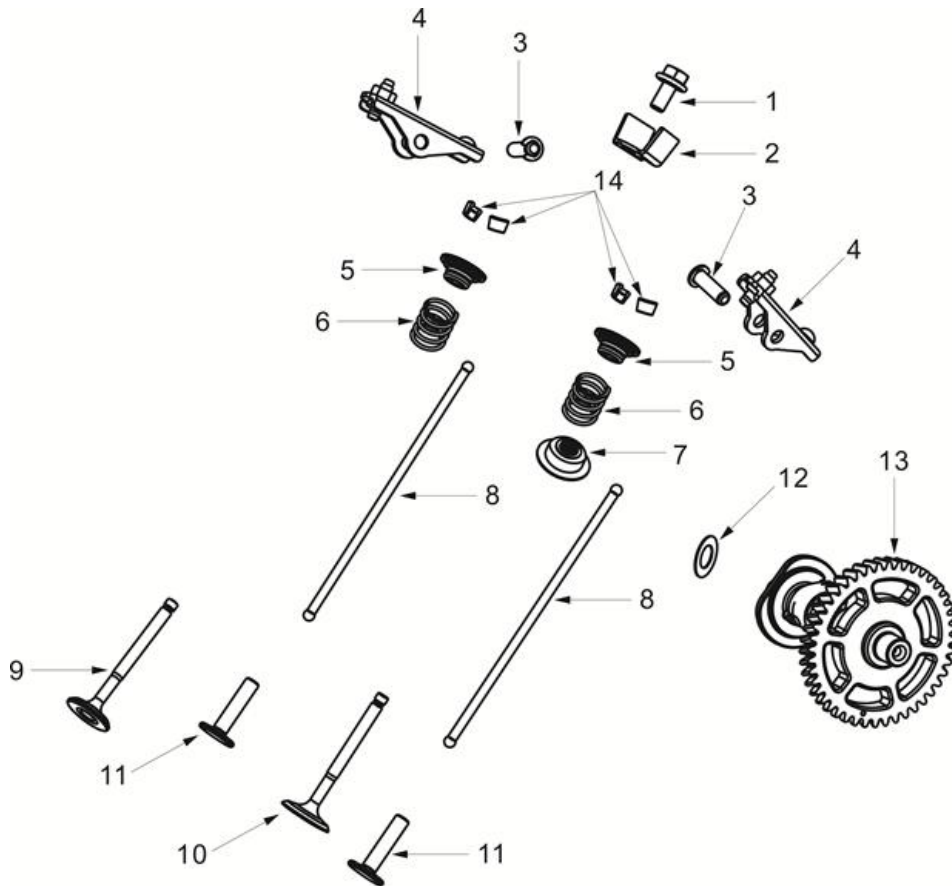


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt	SP3500ISR-005
2	Rocker shaft stop	
3	Rocker pin	
4	Rocker arm assembly	
5	Intake and exhaust valve spring seat	
6	Valve spring	
7	Oil baffle	
8	Putter	
9	Exhaust valve	
10	Intake valve	
11	Tappet	
12	Wear resistant gasket	
13	Camshaft components	
14	Valve clamp lock	

CARBURETOR

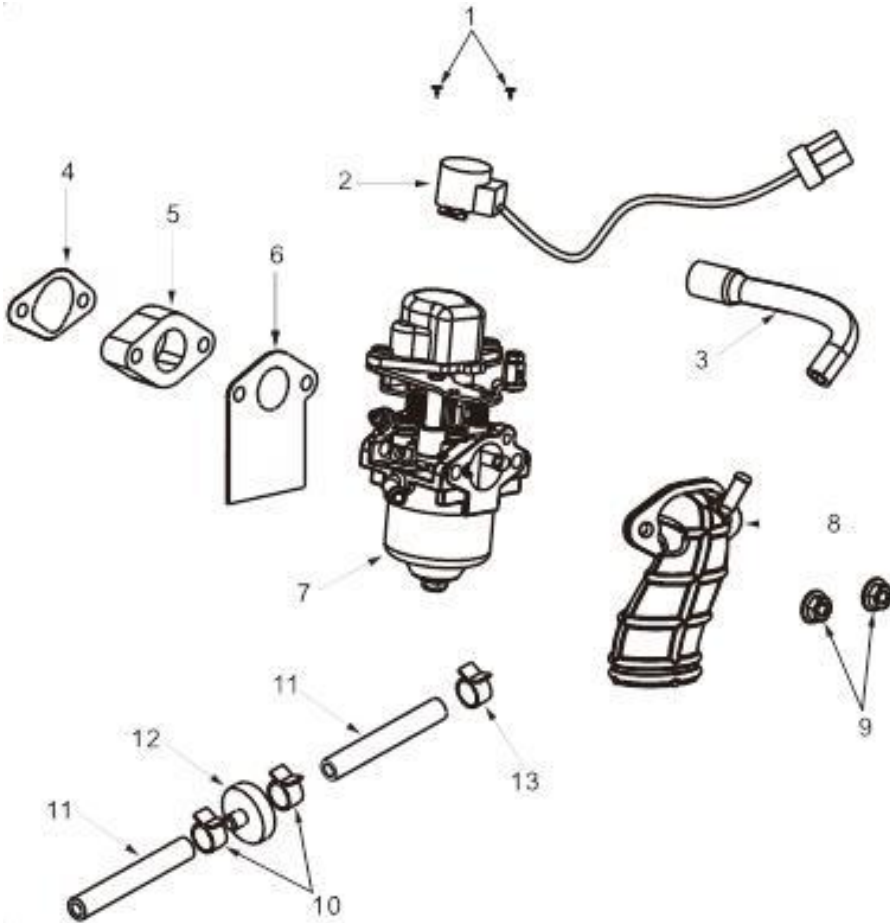


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Cross head screw	SP3500ISR-006
2	Stepper motor	
3	Exhaust pipe	
4	Air inlet gasket	
5	Carburetor block	
6	Carburetor gasket	
7	Carburetor	
8	Intake elbow	
9	Locking nut with disc	
10	Ribbon tubing clamp	
11	Tubing	
12	Fuel filter	SP3500ISR-007
13	Ribbon tubing clamp	

IGNITION COIL

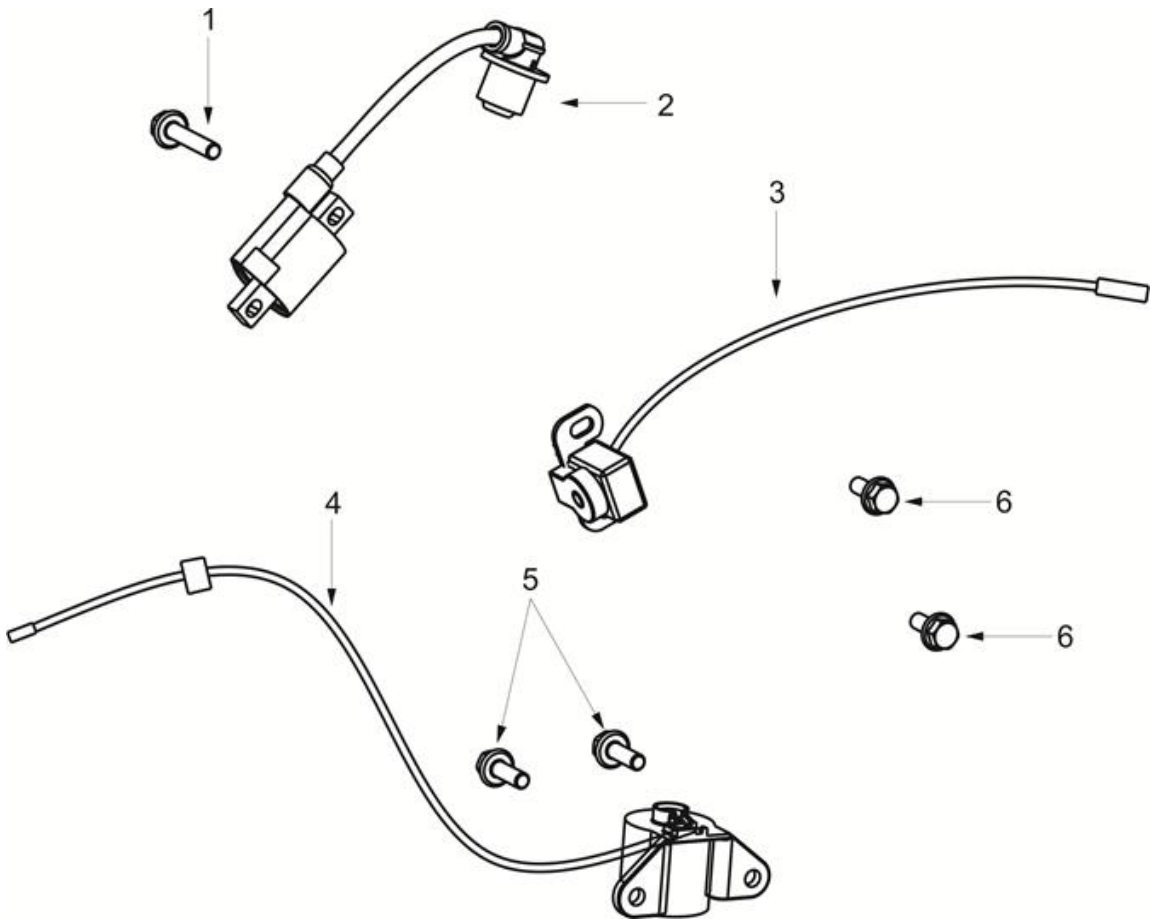


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt	
2	Ignition coil	SP3500ISR-008
3	Trigger coil assembly	SP3500ISR-009
4	Oil alarm	SP3500ISR-010
5	Bolt	
6	Bolt	

MUFFLER

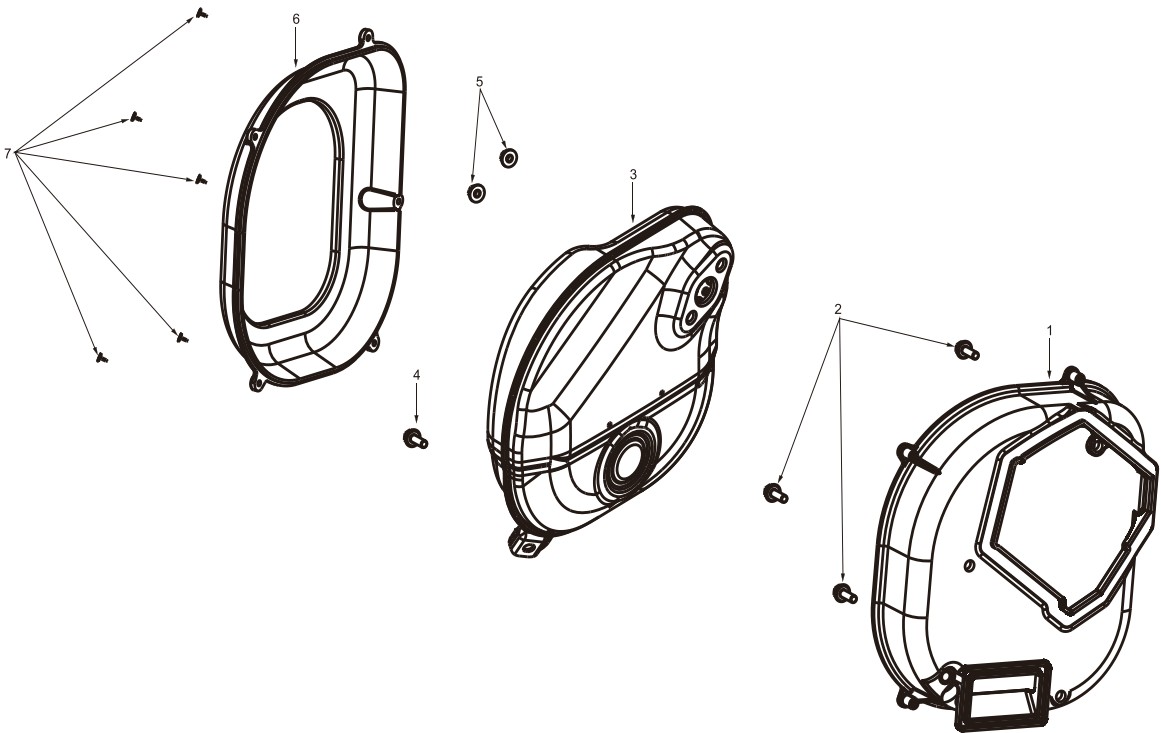


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Muffler cover (front)	
2	Bolt	
3	Muffler components	SP3500ISR-011
4	Bolt	
5	Locking nut with disc	
6	Muffler cover (rear)	
7	Self tapping screw	

ENGINE

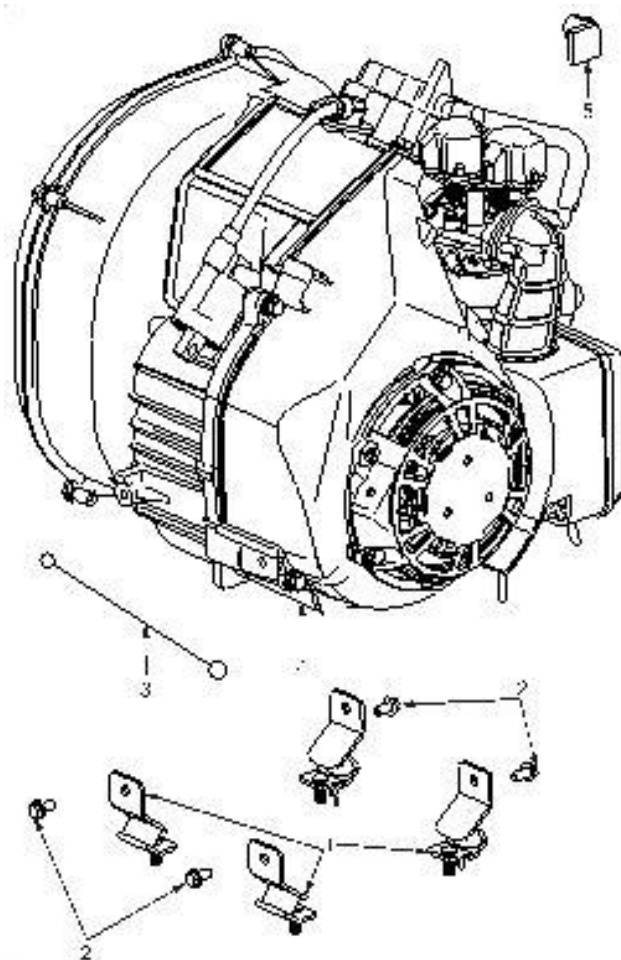


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Shock pad	
2	Bolt M6×12	
3	Ground lead	
4	Engine	
5	Anti-loss rubber strip	

INVERTER

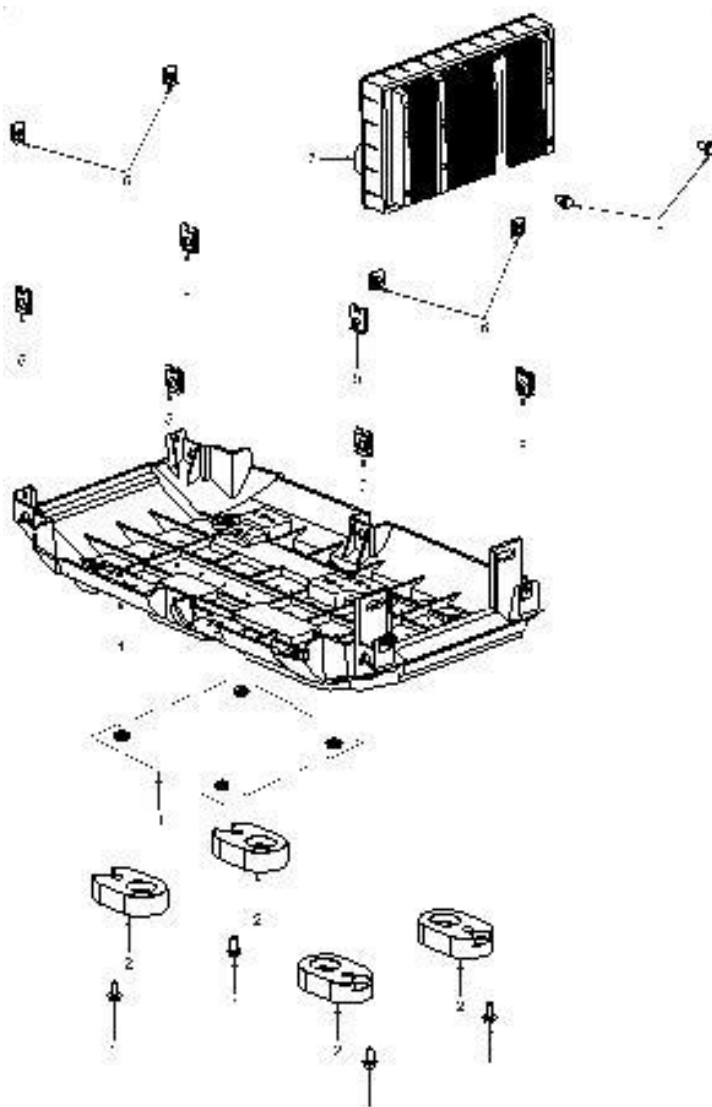


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Bolt M6×18	
2	Shock absorber	
3	Nut M6	
4	Base plate	
5	Nut M6	
6	Nut M5	
7	Inverter	SP3500ISR-012
8	Bolt M6×14	

PANEL

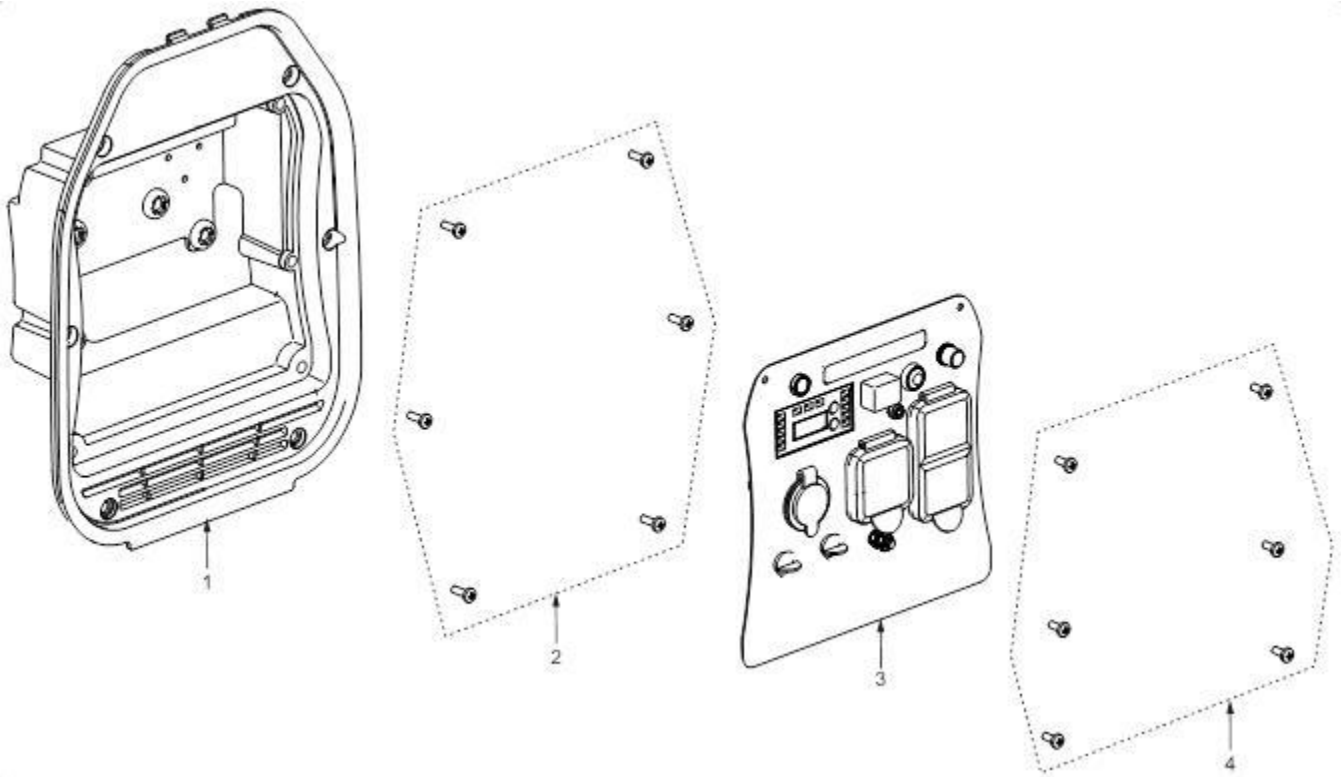


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Panel bed	
2	Screw M5×16	
3	Panel	SP3500ISR-013
4	Screw M5×10	

MUFFLER SHIELD

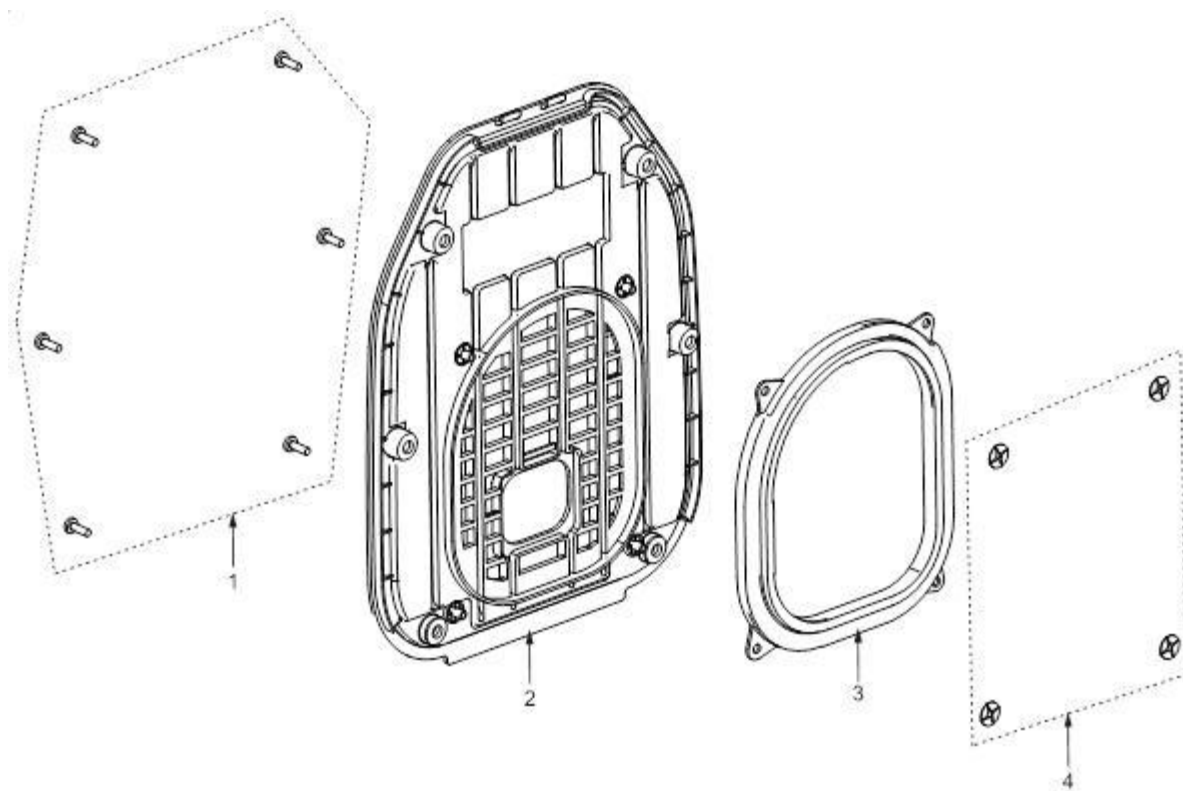


NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Screw M5×16	
2	Muffler shield	
3	Muffler sealant sleeve	
4	Plum ring	

LEFT EXTERIOR COVER

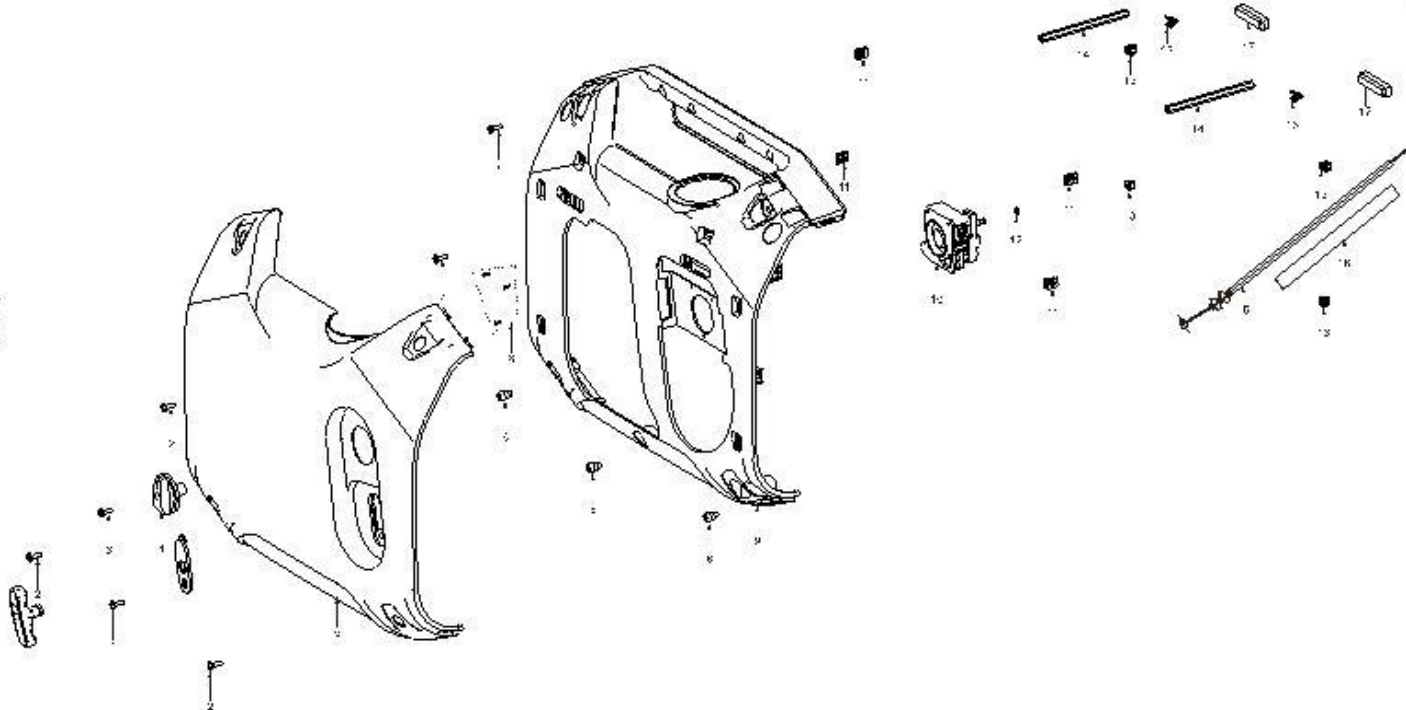

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Screw M5×10	
2	Screw M5×10	
3	Screw M4×14	
4	3-in-1 switch handle	SP3500ISR-014
5	Ornament shell	
6	Bolt M6×16.5	
7	Screw M5×16	
8	Screw M4.2×12	
9	Left shell	
10	Three-in-one switch	SP3500ISR-015
11	Nut M5	
12	Ferrule Ø8	
13	Clamping card	
14	Hexagonal double stud length 120mm	
15	Cable assembly	
16	Silicone case Ø6*320	
17	Tank support rubber pad	

RIGHT EXTERIOR COVER

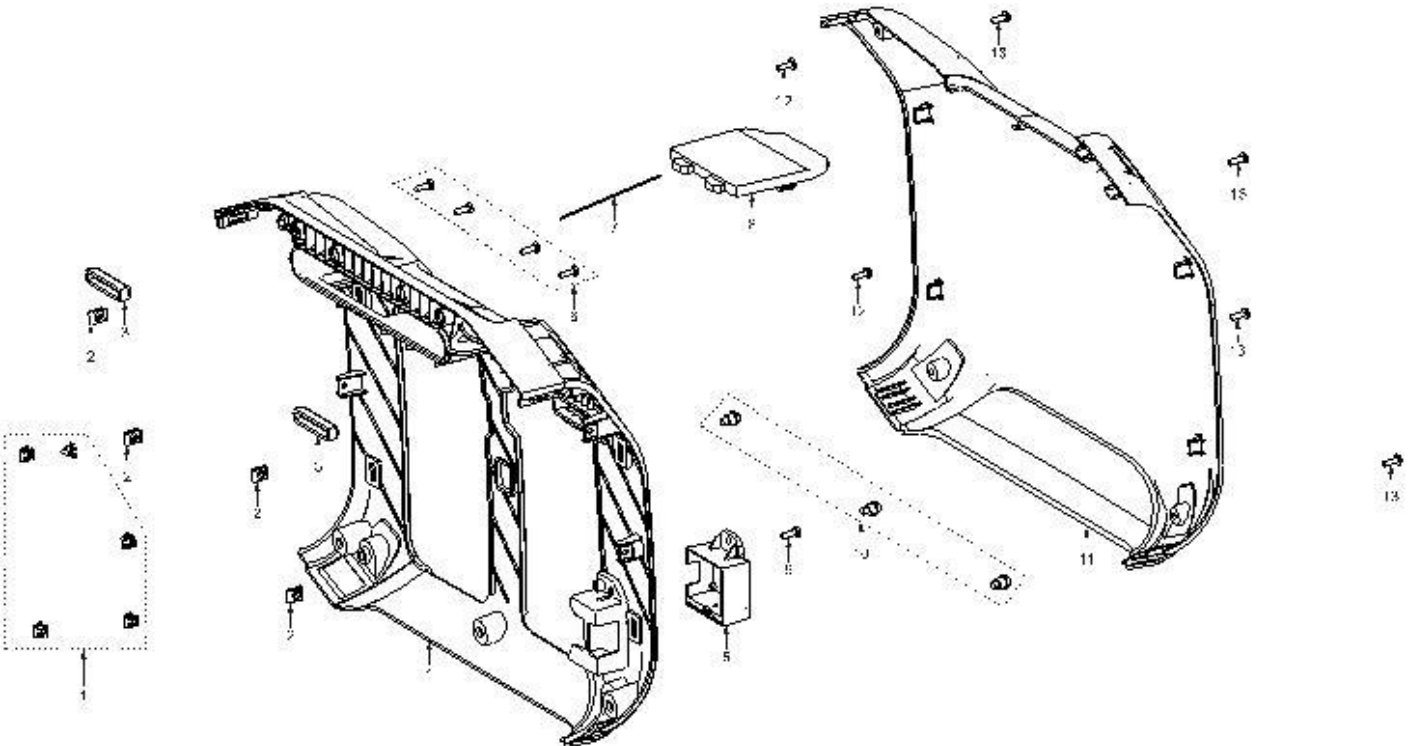

NO.	DESCRIPTION	MAXWATT PART NUMBER
1	Clamping card	
2	Nut M5	
3	Tank support rubber pad	
4	Right shell	
5	Variable voltage rectifier	
6	Bolt M5×16	
7	Anti-loss rubber strip	
8	Spark plug cover plate	
9	Screw M4.2×16	
10	Bolt M6×16.5	
11	Right exterior cover	
12	Screw M5×16	
13	Screw M5×10	

SPARE PARTS AND SERVICING

WHERE DO I TAKE MY PRODUCT FOR SERVICE OR REPAIR?

Please contact MaxWatt at customercare@maxwatt.com.au we can provide after-sales support for your generator.

Should you experience any problems with your generator, it is recommended that you consult the troubleshooting guide in the Instruction Manual first before contacting us. The most common issues can be resolved quickly in this manner without the inconvenience of having to take your generator to a service agent.

ARE SPARE PARTS AVAILABLE FOR PURCHASE?

Yes, we carry a full range of spare parts for all products. Please check our catalogue for a full list of spare parts and contact us if you need to order anything.

Distributed by:



Shop 15/1440 New Cleveland Rd, Chandler QLD 4155

(07) 3732 5363

customercare@maxwatt.com.au