



XCEL

LIGHTWEIGHT DURABLE INSOLES WITH PORON XCEL HEEL CUSHIONING



Open Cell PU Foam



Elevated XCEL Heel Cushioning



Multi-layer Impact



Podiatrist Designed



Moisture Wicking



Anti-microbial Resistance

Redback Xcel insoles have been treated with Aegis Microbe Shield® which provides protection against odor, staining and deterioration caused by bacteria, fungus and other microorganisms.




Profiled arch contour for maximum support

Breathable top cover reduces heat

Moisture wicking

AIRFLOW HIGH ARCH SUPPORT

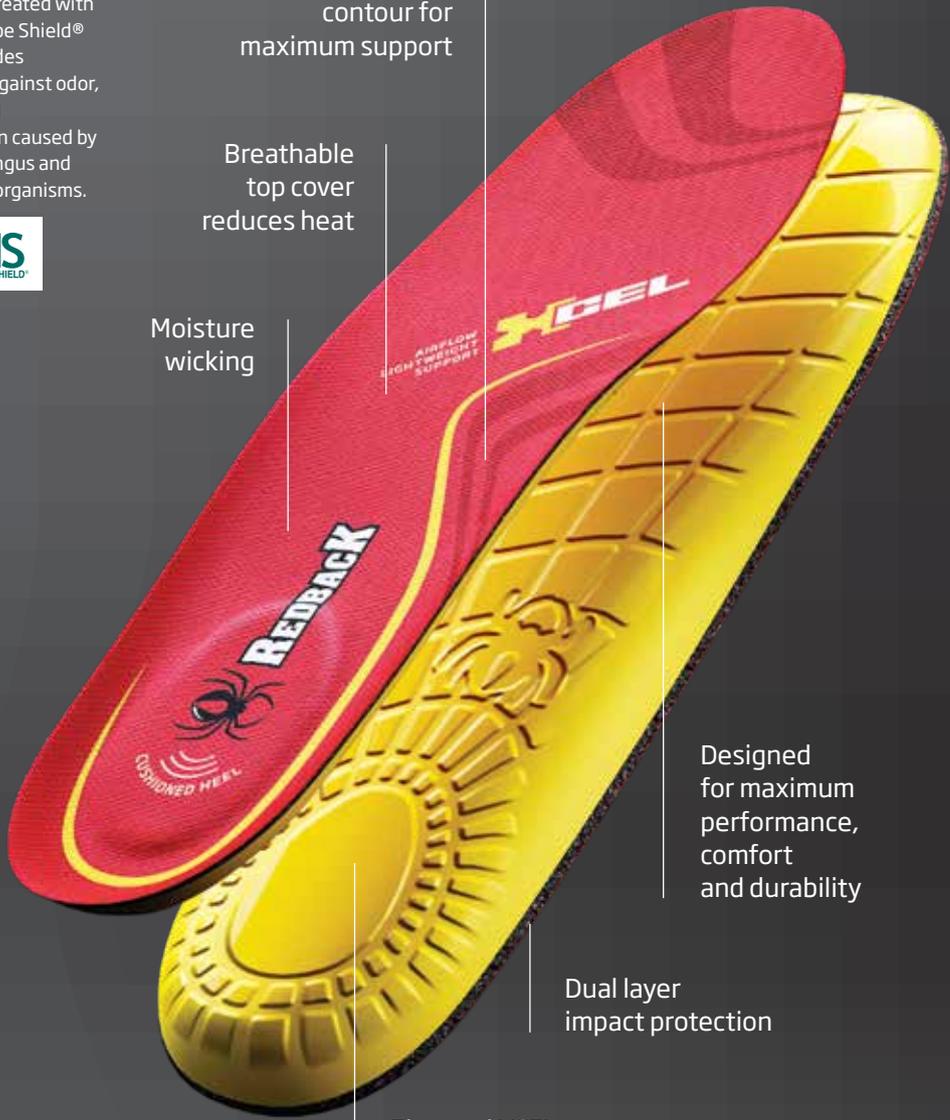

Designed for maximum performance, comfort and durability

Dual layer impact protection

Elevated XCEL heel cushioning

poron® performance cushioning

TRIM TO FIT

Insoles have cut lines on the bottom to allow adjustment to your existing Redback boots. Remove insole from boots, place on top of new Redback Xcel insole and trace around the front edge. With sharp scissors cut to size using traced line or cut lines as a guide for sizing. Place into boots ensure insole sits flat for correct fitment.

XSmall	2 - 4
Small	5 - 7
Medium	8 - 9
Large	10 - 11
XLarge	12 - 13