


KINCROME

**750MM
4 BLADE
WALL FAN**

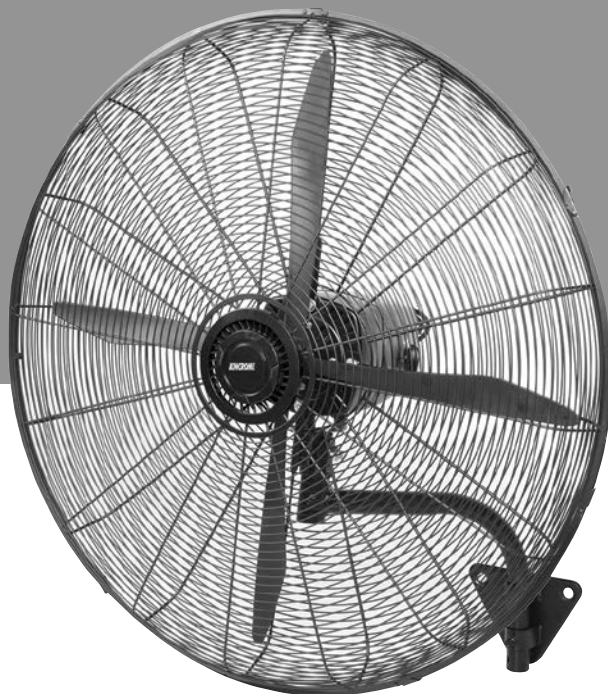

KP1006


ED3 (May 22)

Table of Contents

Know Your Product	2
Fan Safety Instructions	3
Fan Assembly.....	4
Fan Operation	5
Warranty.....	5

Know your product

- 1. Front Safety Grill
- 2. Rear Safety Grill
- 3. Fan Blade
- 4. 3 Speed Switch
- 5. Oscillation Cam Block
- 6. Oscillation Bar Grub Screw
- 7. Locking Knob
- 8. Fan Fixing Bar
- 9. Hanging Bracket
- 10. Fan Grill Securing Hole

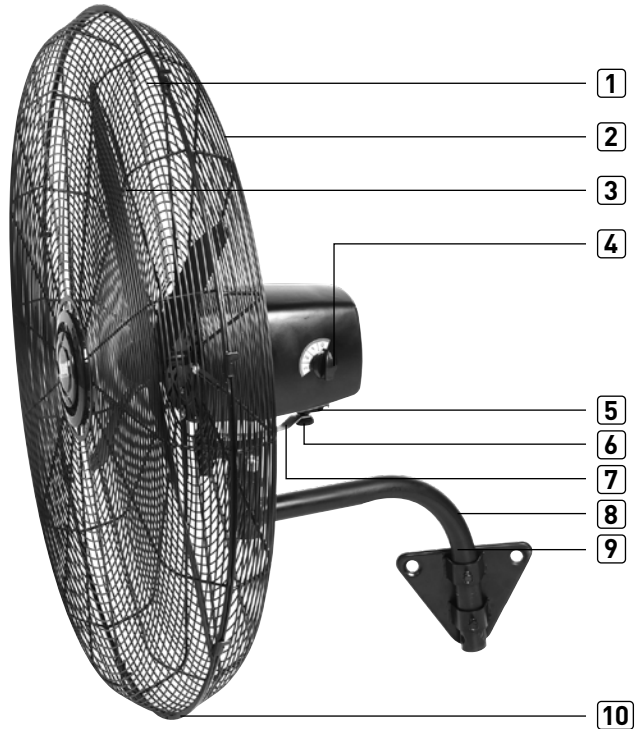

SPECIFICATION

Model No:	KP1006
Voltage:	220-240 V ~ 50 Hz
Wattage:	230W
Rated Speed:	1300 - 1400/rpm
Air Volume:	280 - 300m ³ /min
Blade Type:	Aluminium
Approvals:	Climate Class T
Protection Class:	Double Insulated
Net Weight:	11.7kg

General Power Tools Safety Warnings



Save all warnings and instructions for future reference.

WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

1) Electrical Safety

- a) **Power lead plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
Use of an RCD reduces the risk of electric shock.
- f) **Do not operate powered products in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Powered products create sparks which may ignite the dust or fumes.
- g) **Keep children and bystanders away while operating any powered products.** Distractions can cause you to lose control.

2) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

3) Fan Additional Safety Instructions

- a) **This Fan is not intended for use by persons (including children) with physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Fan by a person responsible for their safety.**
- b) **Children should be supervised to ensure that they do not play with the Fan.**
- c) **Carefully read all instructions before operating the fan for the first time and save for future reference.**
- d) **Do not use this Fan for anything other than its intended use. Do not use outdoors.** Misuse may cause injury.
- e) **The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical Fans.** It is advisable that a safety switch with a rated residual operating current not exceeding 30mA.
- f) **To protect against electric shock, do not immerse the fan, cord or plug in water or any other liquid.**
- g) **Disconnect the power plug before dismantling, assembling or before cleaning and when the fan is not in use.**
- h) **Avoid touching the moving parts of the fan.**
- i) **Ensure the fan is on a dry and even surface.**
- j) **Never insert fingers, pencils or any other objects through the guards.**
- k) **The fan must have all guards assembled/fastened correctly, according to these instructions before use.**
- l) **Do not operate in the presence of explosives and/or flammable fumes or liquids.**
- m) **Never leave the fan running unattended.**
- n) **Never carry the fan by the cord or pull the cord to disconnect from an outlet; instead, grasp the plug and pull to disconnect.**
- o) **It is recommended to regularly inspect the Fan.** To avoid a hazard do not use the fan if power cord, power plug or Fan becomes damaged in any way. Return the fan to the nearest authorised Service Centre for examination and/or repair.

4) Risk of Electric Shock

- a) **Never touch the mains plug and the socket with wet hands.**
- b) **Do not pull the plug from the socket by pulling on the power cable.**
- c) **Check the power cord and mains plug for damage before every use.**
- d) **To avoid accidents due to electrical faults we recommend the use of sockets with a line-side current-limiting circuit breaker (max. 30 mA nominal tripping current).**
- e) **Check the appliance and the power cord regularly for any possible damage.** Don't use damaged appliances.
- f) **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

750mm 4 Blade Wall Fan Assembly Instruction

KP1006 - 750mm 4 Blade Wall Fan

Unpack all the components from the box.

1) Mounting The Wall Fan To The Wall

Caution: The fan must be used in the upright position and firmly fastened to the wall.

1. Determine the desired location of the wall fan and ensure that your wall structure is capable of handling the additional load of the mounted product.
2. Mark the three screw holes with a pencil by holding the hanging bracket (9) to the wall.

Note: Ensure the two holes on the hanging bracket (9) holes are horizontal prior to drilling.

3. Drill the holes at the three pencil marks to suit the anchor being used (not supplied).
4. Mount the hanging bracket (9) securely on the wall with three fixing anchors (not supplied) as per the fastener manufactures instructions.
5. Hang the motor assembly onto the fan fixing bar (8) then fix the fan fixing bar (8) onto the hanging bracket (9) (fig 1a, 1b, 1c).



(fig 1a)




(fig 1b)



(fig 1c)

2) Assembling The Rear Safety Grill To The Fan Motor

1. Align the rear safety grill (2) to the fan motor housing so that the fan grill securing hole is at the bottom of the fan and align the four screw holes (fig 2a).
2. Firmly tighten all of the four screws (fig 2b).

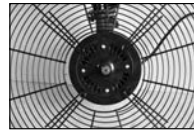

(fig 2a)



(fig 2b)

3) Assembling The Fan Blade To The Fan Motor

1. Rotate the fan motor shaft until the rebated flat area on the shaft is in the 12 o'clock position.
2. Locate the lock screw in the fan blade coupling; while aligning the screw and motor shaft rebated flat area push the fan blade (3) all the way onto the shaft and firmly tighten the grub screw by rotating in a clockwise direction (fig. 3a), (fig. 3b).



(fig 3a)



(fig 3b)

4) Assembling The Front Safety Grill To The Fan Motor

1. Align the top locking clip on the front safety grill (1) to the top centre of the rear safety grill (2) that has already been secured to the fan motor (fig 4a).
2. Lock the side and bottom clips in place (fig 4b) & (fig 4c).
Note: The Kincrome logo should be level or horizontal.
3. Secure the front & rear safety grills together using the fan grill securing hole in the bottom of the fan grill by inserting the fixing screw and nut provided (fig 4d) & (fig 4e).



(fig 4a)



(fig 4b)



(fig 4c)



(fig 4d)



(fig 4e)

5) Operation

Caution: Prior to plugging in the unit ensure the switch is in the off (0) position.

1. Located at the rear right of the motor unit is the 3 speed switch (4).
2. Plug the unit into a wall socket and switch the socket on.
3. Rotate the 3 speed switch (4) to the desired speed 0 – OFF, 1 – LOW, 2 – MEDIUM, 3 – HIGH.
4. To turn the unit off rotate the switch (4) to the OFF position 0.

6) Adjusting The Oscillation

Caution: Prior to making any adjustments ensure the unit is turned off and unplugged, and the blades are stationary.

7) Activating the oscillation

1. Align the oscillation bar (5) and locking knob (7) with the outer screw hole in the oscillation cam block (5) (fig 5a).
2. Tighten the locking knob (7) in a clockwise position.

8) Deactivating the oscillation

1. Unscrew the locking knob (7).
2. Align the oscillation bar (6) and locking knob (7) with the centre screw hole in the oscillation cam block (5) (fig 5b).
3. Tighten the locking knob (7) in a clockwise direction.
4. Tighten the grub screw in the oscillation cam block (5).



(fig 5a)



(fig 5b)

9) Tilt Adjustment

Caution: Ensure both the front and rear grill are assembled prior to making any adjustments.

Caution: Ensure the unit is turned off and unplugged, and the blades are stationary prior to making any adjustments.

1. To adjust the fan tilt; Hold the motor then loosen the bolt under the motor head and tilt the fan to the desired position; re-tighten the bolt under the motor FIRMLY.
2. Plug the unit back in and turn on to the desired speed.

10) Care & Maintenance

Caution: Prior to cleaning or maintaining the fan ensure the unit is turned off and unplugged, and the blades are stationary.

1. Disconnect the unit from the wall socket prior to cleaning the unit.
2. Clean the fan only with a slightly damp, soapy cloth, but ensure it is not too wet. After wiping down the unit with the soapy cloth, dry any wet spots with a dry paper towel or dry clean cloth.
3. **DO NOT** spray or rinse with any form of liquid and/or detergents.
4. Store the fan in a clean dry area when not in use.
5. Ensure you regularly remove built up dust from the fan blade (3) and front & rear safety grills (1) & (2).

**1 YEAR
WARRANTY**

Warranty

Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). The applicable warranty period (12 months) commences on the date that the product is purchased. If

this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit www.kincrome.com.au or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.

KINCROME

www.kincrome.com.au